



02-22-400-018  
100.0

400

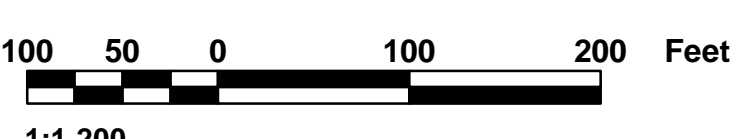

1:1,200

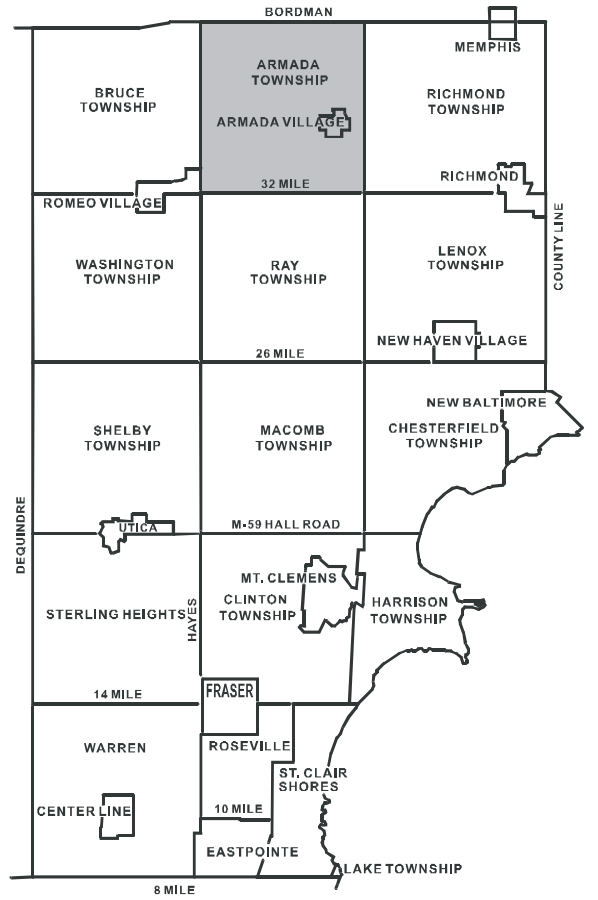

AREA NUMBER	SUB AREA NUMBER	BLOCK NUMBER	PARCEL NUMBER
02-22-400-001	01	01	01
02-22-400-001	01	02	02
02-22-400-001	01	03	03
02-22-400-001	01	04	04
02-22-400-001	01	05	05
02-22-400-001	01	06	06
02-22-400-001	01	07	07
02-22-400-001	01	08	08
02-22-400-001	01	09	09
02-22-400-001	01	10	10
02-22-400-001	01	11	11
02-22-400-001	01	12	12
02-22-400-001	01	13	13
02-22-400-001	01	14	14
02-22-400-001	01	15	15
02-22-400-001	01	16	16
02-22-400-001	01	17	17
02-22-400-001	01	18	18
02-22-400-001	01	19	19
02-22-400-001	01	20	20
02-22-400-001	01	21	21
02-22-400-001	01	22	22
02-22-400-001	01	23	23
02-22-400-001	01	24	24
02-22-400-001	01	25	25
02-22-400-001	01	26	26
02-22-400-001	01	27	27
02-22-400-001	01	28	28
02-22-400-001	01	29	29
02-22-400-001	01	30	30
02-22-400-001	01	31	31
02-22-400-001	01	32	32
02-22-400-001	01	33	33
02-22-400-001	01	34	34
02-22-400-001	01	35	35
02-22-400-001	01	36	36
02-22-400-001	01	37	37
02-22-400-001	01	38	38
02-22-400-001	01	39	39
02-22-400-001	01	40	40
02-22-400-001	01	41	41
02-22-400-001	01	42	42
02-22-400-001	01	43	43
02-22-400-001	01	44	44
02-22-400-001	01	45	45
02-22-400-001	01	46	46
02-22-400-001	01	47	47
02-22-400-001	01	48	48
02-22-400-001	01	49	49
02-22-400-001	01	50	50
02-22-400-001	01	51	51
02-22-400-001	01	52	52
02-22-400-001	01	53	53
02-22-400-001	01	54	54
02-22-400-001	01	55	55
02-22-400-001	01	56	56
02-22-400-001	01	57	57
02-22-400-001	01	58	58
02-22-400-001	01	59	59
02-22-400-001	01	60	60
02-22-400-001	01	61	61
02-22-400-001	01	62	62
02-22-400-001	01	63	63
02-22-400-001	01	64	64
02-22-400-001	01	65	65
02-22-400-001	01	66	66
02-22-400-001	01	67	67
02-22-400-001	01	68	68
02-22-400-001	01	69	69
02-22-400-001	01	70	70
02-22-400-001	01	71	71
02-22-400-001	01	72	72
02-22-400-001	01	73	73
02-22-400-001	01	74	74
02-22-400-001	01	75	75
02-22-400-001	01	76	76
02-22-400-001	01	77	77
02-22-400-001	01	78	78
02-22-400-001	01	79	79
02-22-400-001	01	80	80
02-22-400-001	01	81	81
02-22-400-001	01	82	82
02-22-400-001	01	83	83
02-22-400-001	01	84	84
02-22-400-001	01	85	85
02-22-400-001	01	86	86
02-22-400-001	01	87	87
02-22-400-001	01	88	88
02-22-400-001	01	89	89
02-22-400-001	01	90	90
02-22-400-001	01	91	91
02-22-400-001	01	92	92
02-22-400-001	01	93	93
02-22-400-001	01	94	94
02-22-400-001	01	95	95
02-22-400-001	01	96	96
02-22-400-001	01	97	97
02-22-400-001	01	98	98
02-22-400-001	01	99	99
02-22-400-001	01	100	100

DESCRIPTION OF PERMANENT REAL ESTATE INDEX NUMBER  
**13-19-302-018**

AREA NUMBER (TOWNSHIP UNDER GOVERNMENT SURVEY)	SUB AREA NUMBER (ALWAYS CONSIDER WITH SECTION NUMBER)	BLOCK NUMBER (CITY BLOCK LOCATION IN SECTION)	PARCEL NUMBER (USUALLY A HOUSE LOT OR FAIR)
---	--	--	--

- Legend**
- Platted Area Boundary Line
  - Property Line
  - Property Split Line
  - Property Combined Line
  - Township Boundary Line
  - Traverse Line
  - Dimension Extent Marks
  - Dimension Start Marks

**02-22G**

Previously part of 02-K  
**ARMADA TWP.**  
W. 1/2 S.E. 1/4 SEC. 22 T. 5N. R. 13E.

Source: Macomb County Department of Planning and Economic Development  
- 2008 Digital Orthophotography Project  
- Parcel Conversion Project

Note:  
Digital Orthophotography horizontal positioning accuracy is 3 feet. Parcel boundary lines should be considered a graphical representation and not in any way a legal survey or engineering document. In general, the horizontal positioning and length accuracy is within 15 feet.

This map is intended for general planning purposes. Site specific evaluation should be verified by field inspection. This is a work in progress and may contain errors and omissions. Please report any potential revisions to (586)469-5285.

